



IRONED
www.ironed.co






**OPEN THE TOP OF THE PACKAGING BOX,
FOLD TO THE OPPOSITE SIDE & PLACE THE
TEMPLATE AGAINST THE WALL AT THE
REQUIRED POSITION.**

YOUR TOOL
... HERE FOR INSTALLATION TEMPLATE

WALL MOUNT
BRACKET

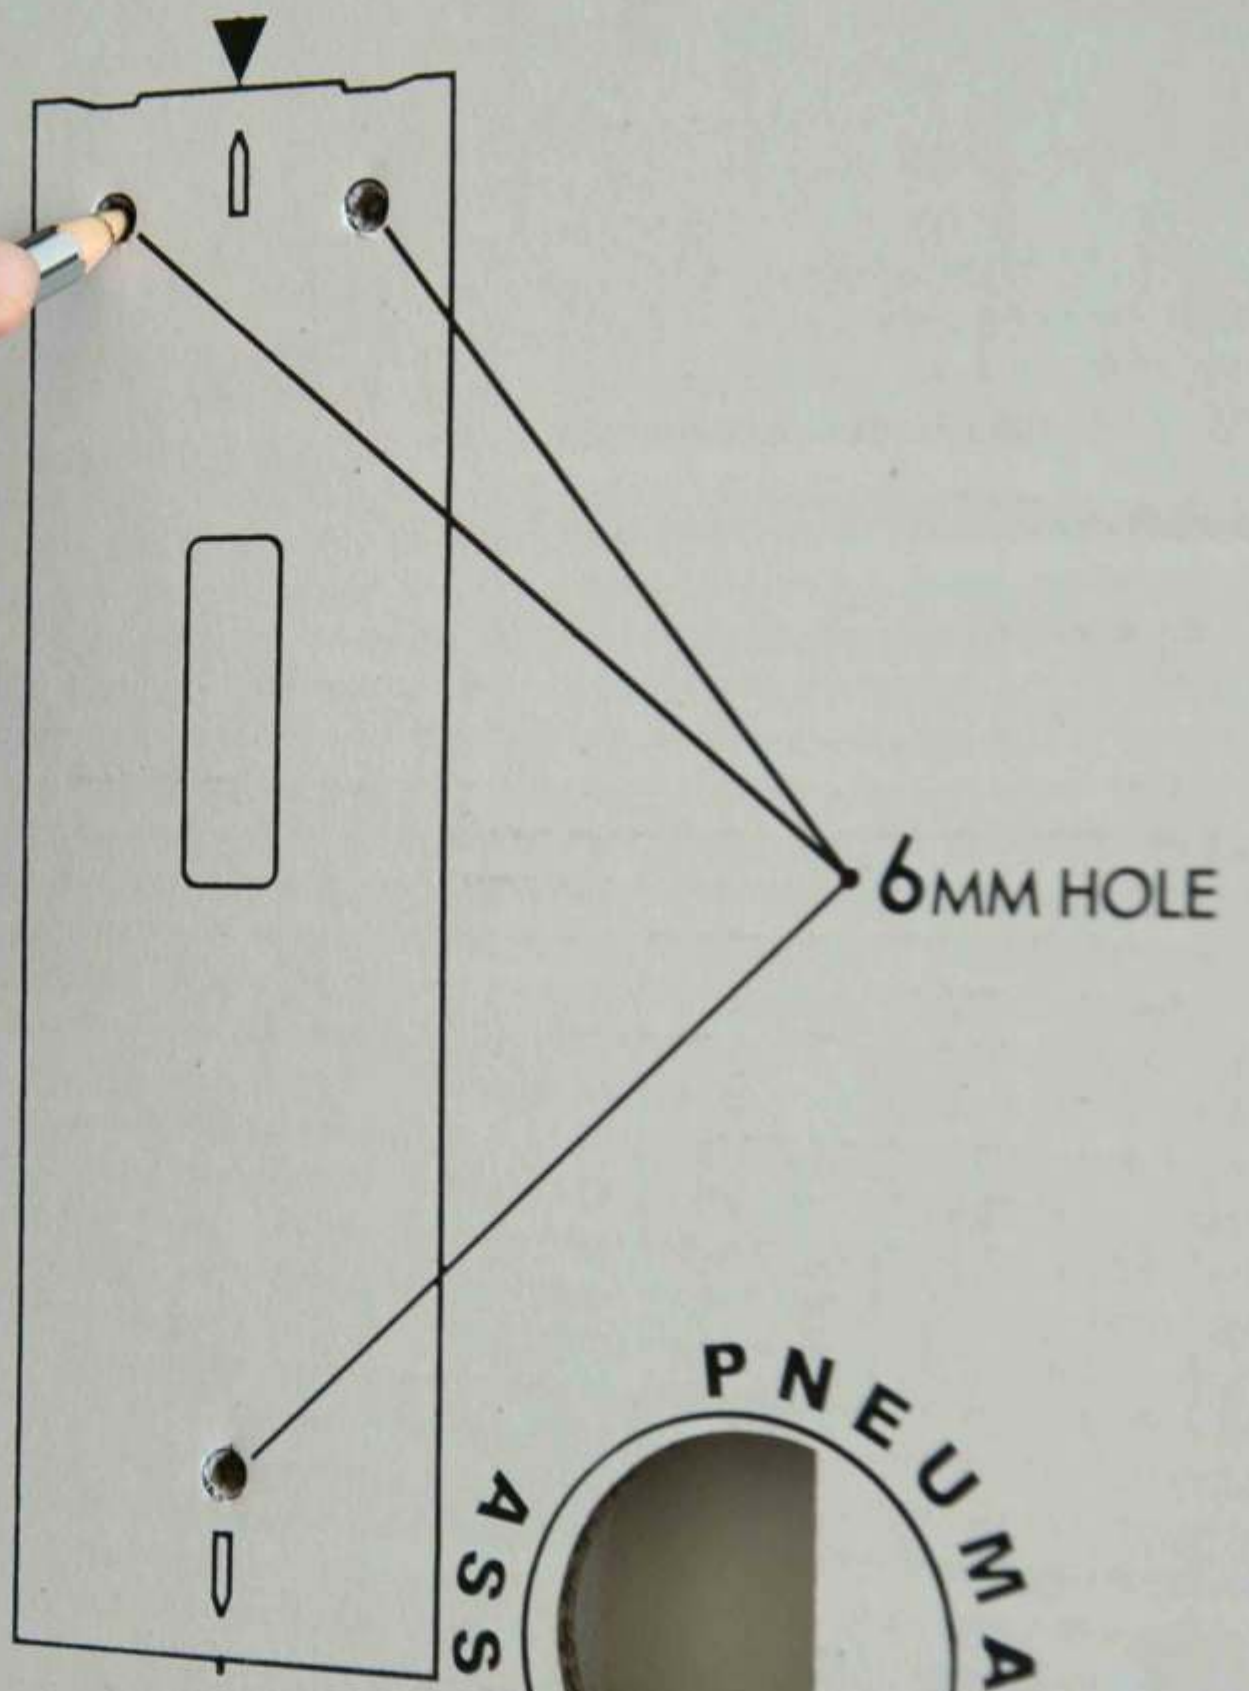

6MM HOLE

PNEUMATIC
ASSISTED

MARK THE THREE HOLES.

YOUR



**DO NOT REMOVE THE
WHITE BINDING STRAP.**





**REMOVE THE
CHROME IRON HOLDER
BY PULLING UPWARDS
AND OUT.**



**REMOVE THE WALL
MOUNTING BRACKET
PACKED ON THE REAR
OF THE UNIT.**



x x

x


- FOR WALL INSTALLATION,**
- USE 6MM DRILL BIT & DRILL 3 HOLES.
 - INSERT THE 3 PLASTIC PLUGS INTO THE HOLES.
 - MOUNT BRACKET USING THE LONG SCREWS.



**FOR WOOD INSTALLATION,
-NO DRILLING.
- USE A SCREWDRIVER AND
MOUNT THE BRACKET WITH
THE SHORT SCREWS.**



HOLD THE IRON  BOARD UPRIGHT & INSTALL THE IRON HOLDER THROUGH THE SLOTS PROVIDED. PUSH FIRMLY DOWNWARDS TILL THE STOPPER.

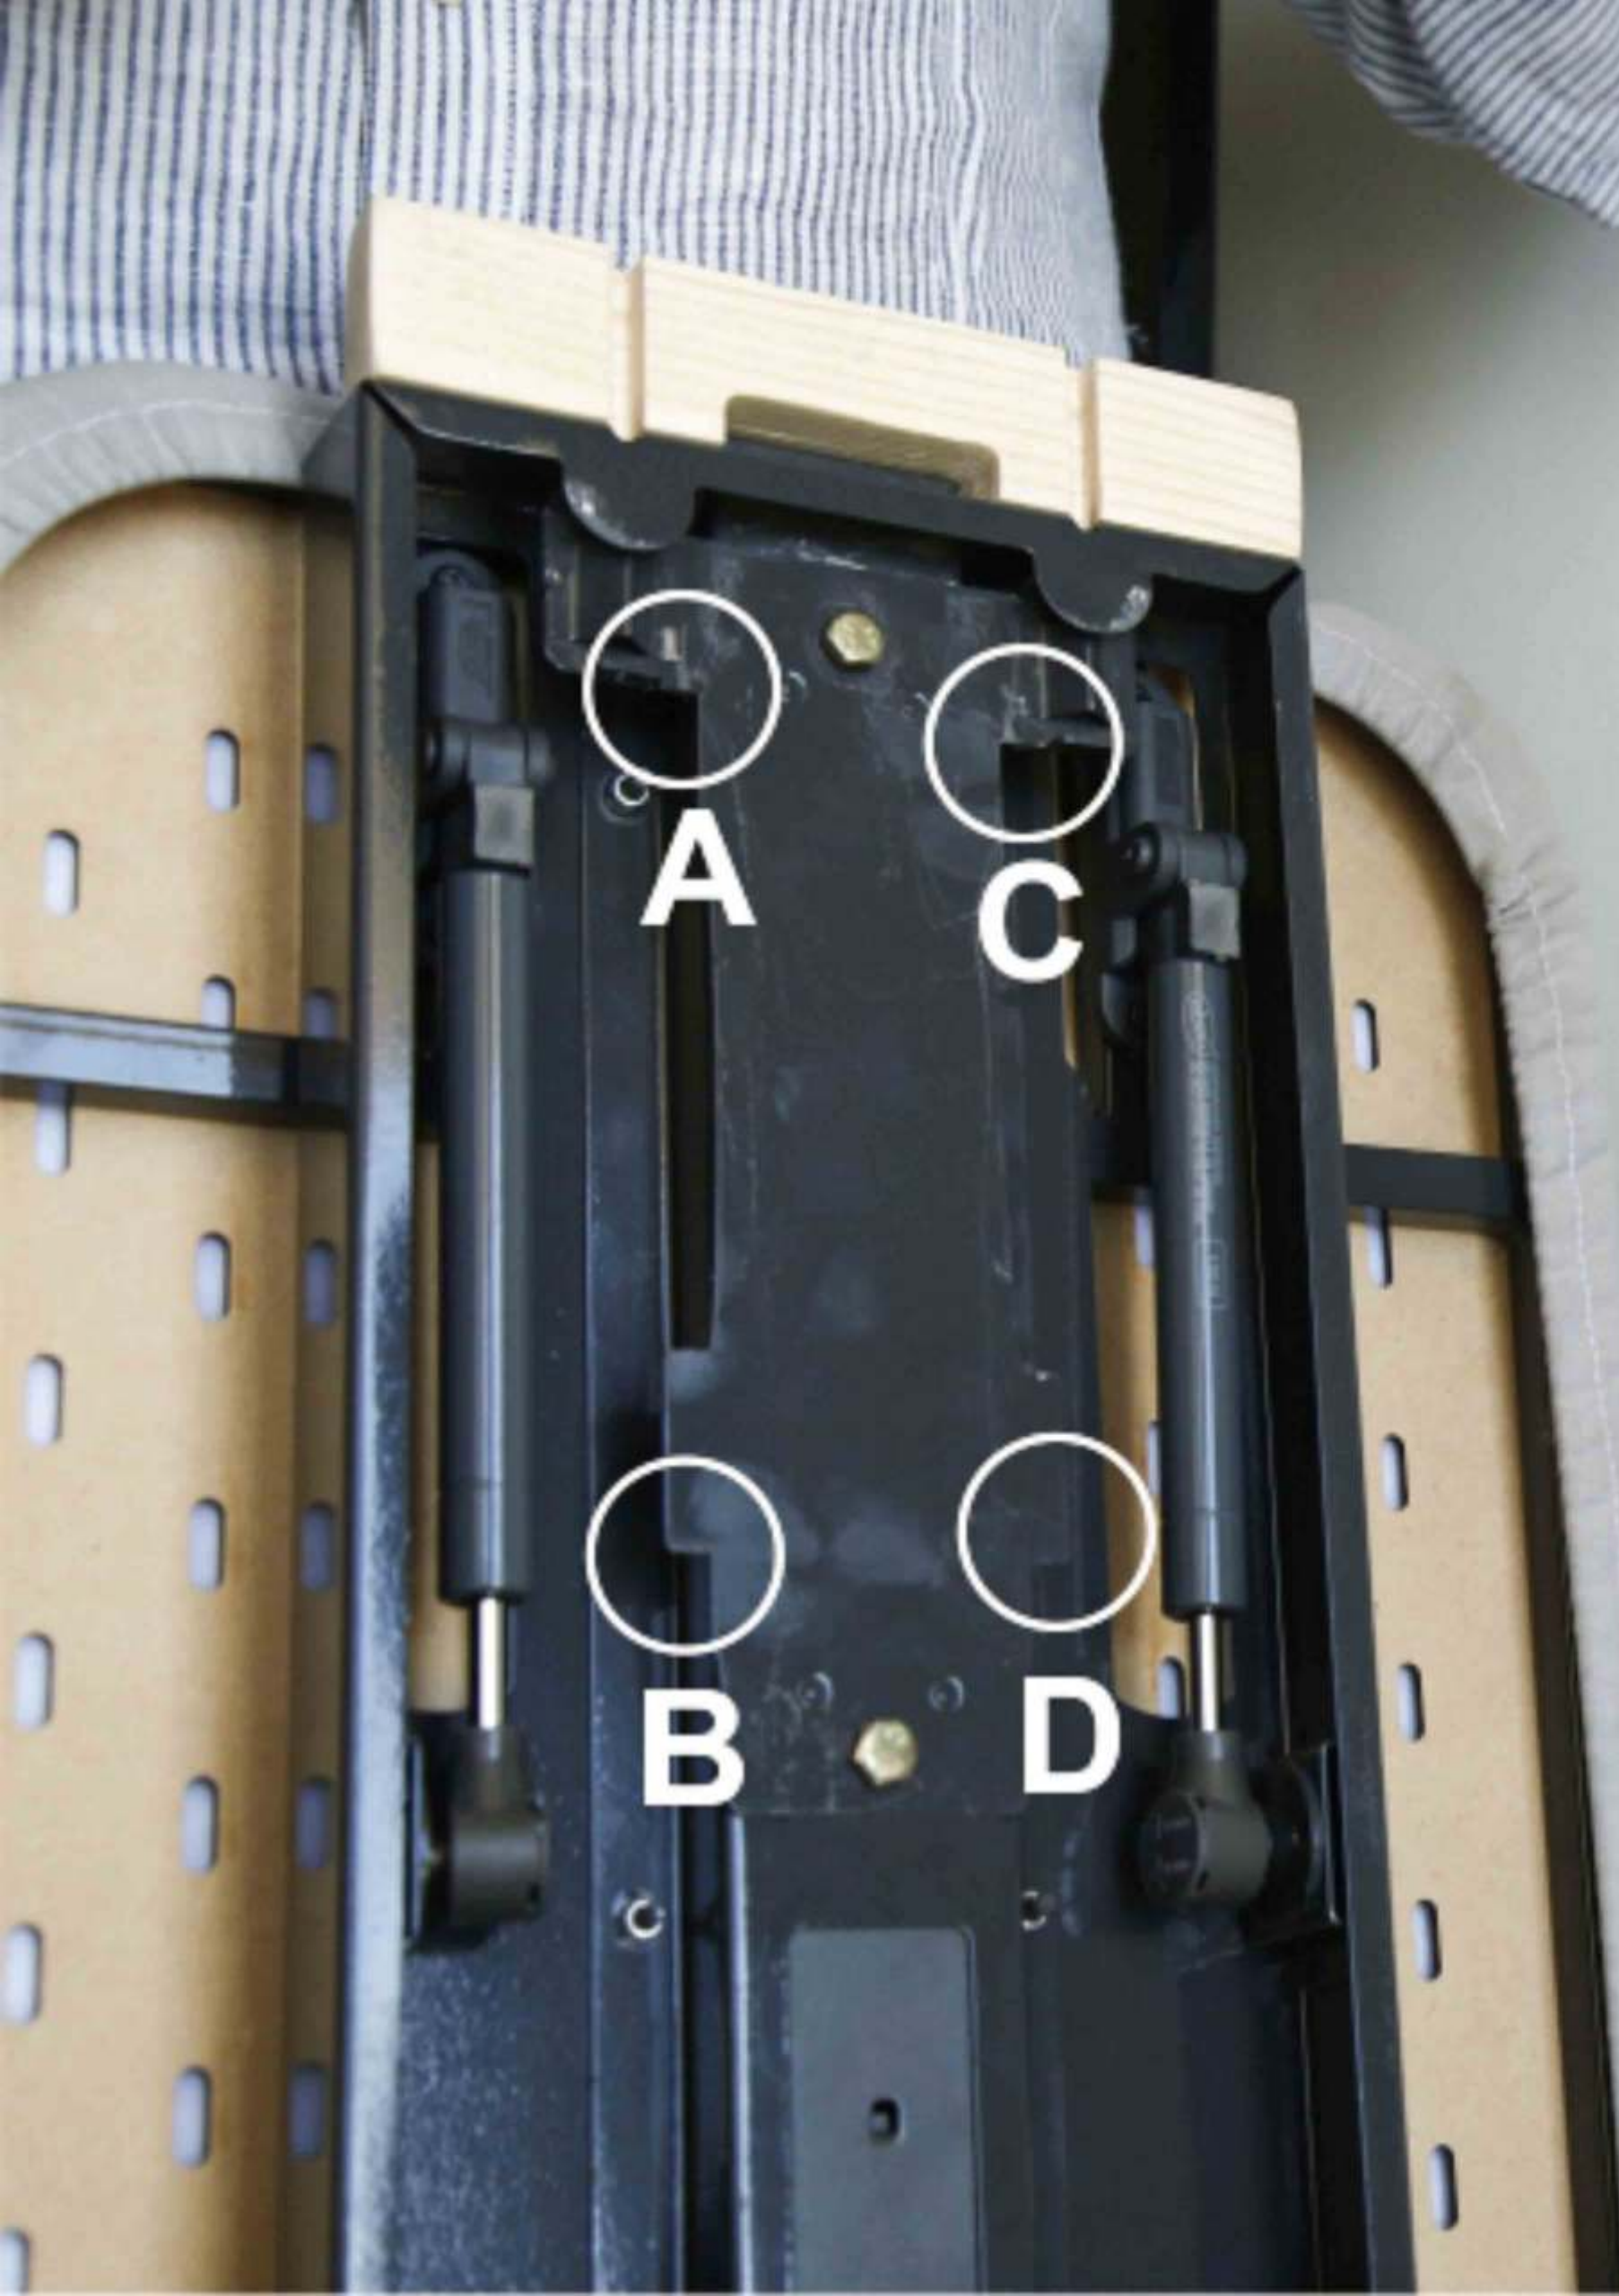

A



C



B



D

REMOVE THE WHITE BINDING STRAP.



C



A



D



B

KEEP THE IRON_d™ BOARD FOLDED, AND ALIGN WITH THE WALL BRACKET.



**LIFT TO LOCK IN PLACE.
ENSURE LOCKED POSITION
BEFORE USE. SAFETY FIRST!**

**INSTALL YOUR IRON_{ed}™ BOARD
ONTO THE WALL BRACKET WITH
A FIRM DOWNWARD MOVEMENT.**